

# 400 Series

Engine & Equipment  
Model

## 6.404D

215,000-335,845

6 Cyl

Bore: 4.25 in  
108 mm  
Pin Ø: 1.50 in  
38 mm

### Block (m):

R40610, R40620, R45950,  
R47170, R48440


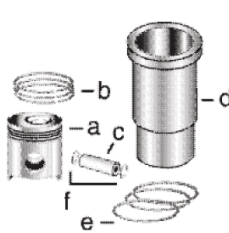

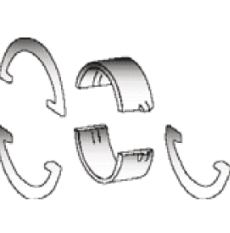

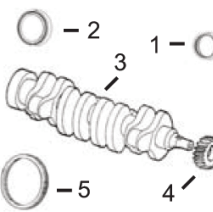
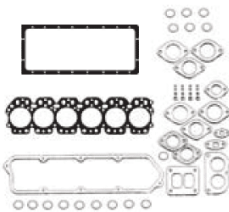
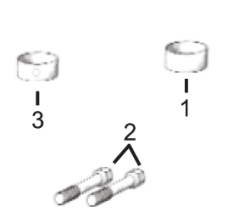
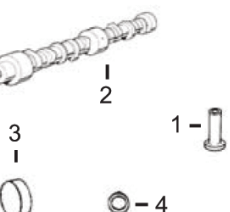





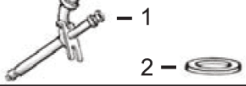
### APPLICATIONS:

#### AGRICULTURAL

4000  
4010  
4020

#### CONSTRUCTION

600

				
<b>1) Engine O/H Kit</b>	<b>Piston-Liner Kit</b>	<b>Main Bearing</b>	<b>Thrust Bearing</b>	<b>Con Rod Bearing</b>
<b>2) Engine I/F Kit</b>	<b>TRE23165</b> Consists of: a) <a href="#">TRE23168</a> b) <a href="#">TAR55630</a> c) <a href="#">TR44161</a> d) <a href="#">TR40615</a> e) <a href="#">TAR65507</a> f) <a href="#">TH80753</a>	<a href="#">TAR74814</a> Std. <a href="#">TAR74816</a> .010 <a href="#">TAR74817</a> .020 <a href="#">TAR74818</a> .030 <b>Use 6</b>	<a href="#">TAR77748</a> Std. <a href="#">TAR77750</a> .010 <a href="#">TAR77751</a> .020 <a href="#">TAR77752</a> .030 <b>Use 1</b> <b>Thrust Washer</b> <a href="#">TAR77747</a> Std. <a href="#">TAR77753</a> .007 <b>Use 3, Order Qty 1</b>	<a href="#">TAR45723</a> Std. <a href="#">TAR46396</a> .010 <a href="#">TAR46397</a> .020 <a href="#">TAR46398</a> .030 <b>Use 6</b>
<b>1) <a href="#">TRG17903</a></b>				
<b>2) <a href="#">TIK17903</a></b>				
				
<b>1) Front Seal</b> <b>2) Rear Seal</b>	<b>1) O/H Gasket Set</b>	<b>1) Bush, Con Rod</b> <b>2) Bolt, Con Rod</b> <b>3) Bushing, Cam</b>	<b>1) Cam Follower</b> <b>2) Camshaft Kit</b> <b>3) Plug, Camshaft</b> <b>4) O'ring, Oil Cooler</b>	<b>1) Head Bolt Kit</b>
<b>3) Crankshaft</b> <b>4) Crankshaft, Gear</b> <b>5) Ring Gear</b>	<b>2) Head Gasket Set</b> <b>3) Head Gasket</b> <b>4) Oil Pan Gasket</b>			
<b>1) <a href="#">TAR49025</a></b> <b>2) <a href="#">TRE520036</a></b> <b>3) <a href="#">TRE53422</a> (5)</b> <b>4) <a href="#">TR26049</a> (23T)</b> <b>5) <a href="#">TR28811</a> (129T)</b>	<b>1) <a href="#">TAR53631</a></b> <b>2) <a href="#">TAR53630</a></b> <b>3) <a href="#">TR48291</a></b> <b>4) <a href="#">TR71918</a></b>	<b>1) <a href="#">TR30939</a> x6</b> <b>2) <a href="#">TR66452</a> x12</b> <b>3) <a href="#">TR46903</a> x4</b>	<b>1) <a href="#">TR52773</a></b> <b>2) <a href="#">TAR100386</a></b> <b>3) <a href="#">TR26115</a></b> <b>4) <a href="#">TR47153</a></b>	<b>1) <a href="#">TMX365</a> (1)</b>
	<b>Valve, Intake</b>	<b>Valve, Exhaust</b>	<b>Insert, Valve</b> <b>1) Intake</b> <b>2) Exhaust</b>	<b>1) Cap, Valve</b> <b>2) Lock, Valve</b> <b>1) Spring, Valve</b> <b>2) Rotator, Valve</b> <b>3) O'ring, Valve</b>
	<a href="#">TR43883</a> Std. <a href="#">TR45003</a> .003 <a href="#">TR45004</a> .015	<a href="#">TR43679</a> Std. <a href="#">TR43787</a> .003 <a href="#">TR43788</a> .015	<b>1) <a href="#">TR43680</a> Std.</b> <b>2) <a href="#">TR43681</a> Std.</b>	<b>1) <a href="#">TT20129</a></b> <b>2) <a href="#">TT20077</a></b> <b>1) <a href="#">TR26125</a></b> <b>2) <a href="#">TRE11410</a></b> <b>3) <a href="#">TR87627</a></b>
				
<b>Thermostat</b>	<b>Fuel Transfer Pump</b>	<b>Water Pump Repair Kit</b>		<b>1) Injector, Pencil</b> <b>2) Seal, Injector</b>
<a href="#">TR36846</a> 180° F	<a href="#">TAR53567</a> (2) <a href="#">TRE42211</a> (3) <a href="#">TAR49771</a> (4)	Without Impeller	With Impeller	<b>1) <a href="#">TAR50781</a></b> <b>2) <a href="#">TR60746</a></b> <b><a href="#">TR48000</a></b>
		<a href="#">See Chart</a>		<b>Pump, Oil, Quad Transmission</b> <a href="#">TAR41949</a> For Tractors 4000,4020

(1) [TMX365](#) Consists of: [TR88042](#) x6, [TR88043](#) x5, [TR88044](#) x8, [TR88045](#) x7.

(2) ES > 82,801.

(3) ES 82,802-422,365.

(4) ES 422,366 >.

(5) [TRE53422](#) will require front key [TR116311](#) for the front damper.