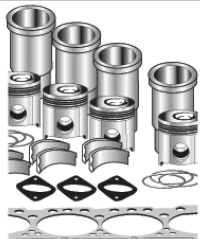
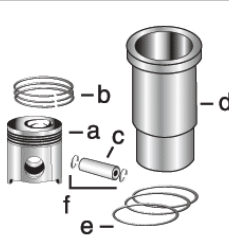


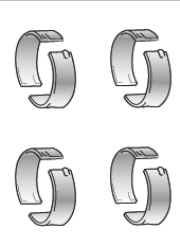
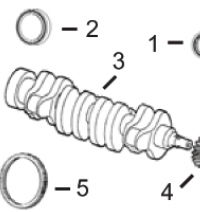
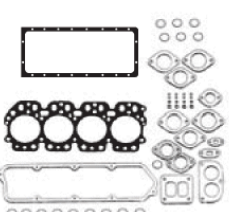
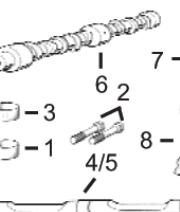
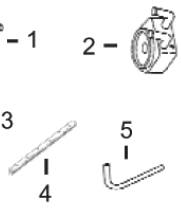
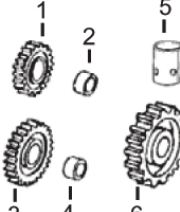


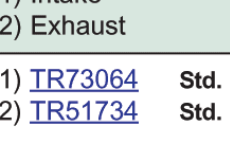









300 Series Engine & Equipment Model						
4.219 (1) 275,484 > O'Rings on block Large Pin 4 Cyl Bore: 4.02 in 102 mm Pin Ø: 1.375 in 35 mm Con Rod (m): R51727, R80034 APPLICATIONS: AGRICULTURAL 499 2270 1035 2280 1130 2320 1635 2440 2030 2530 2035 3300 2120 CONSTRUCTION 310/B 450C/D 401B/C/D 455D 410/B 480B/C 440B 540B		1) Engine O/H Kit	Piston-Liner Kit	Main Bearing	Thrust Bearing	Con Rod Bearing
		2) Engine I/F Kit	TAR78041 Consists of: a) TAR77762 b) TAR55759 c) TR125754 d) TR116463 e) TAR71618 f) TM41029	TRE27352 Std. TRE27353 .010 TRE27360 .020 TRE27368 .030	TAT21139 Std. TAT21132 .010 TAT21134 .020 TAT21136 .030	TRE27348 Std. TRE27349 .010 TRE27358 .020 TRE27364 .030
		1) TAT86984		Use 4	Use 1	Use 4
		2) TIK86984				
						
		1) Front Seal 2) Rear Seal	1) O/H Gasket Set	1) Bush, Con Rod 2) Bolt, Con Rod 3) Bush, Bal. Shaft	1) Pump, Oil 2) Oil Cooler 3) Rocker Arm 4) Rocker Shaft 5) Pump, Oil Tube	1) Lower Gear 2) Lower Bushing 3) Upper Gear 4) Upper Bushing 5) Cam. Follower 6) Cam. Gear
		3) Crankshaft 4) Crankshaft, Gear 5) Ring Gear	2) Head Gasket Set 3) Head Gasket 4) Oil Pan Gasket 5) Rocker Cover Gsk	4) Bal. Shaft R/H 5) Bal. Shaft L/H 6) Camshaft 7) Bal. Shaft Stop 8) Con Rod		
		1) TAR67942 2) TRE44574 3) TAT18030 4) TT20094 5) TR114282 (142T)	1) TRE501579 2) TRE38851 3) TR125863 4) TR97342 5) TR73521	1) TR55647 x4 2) TR74194 x8 (2) 3) TR57160 x6 (5) 4) TRE26282 R/H 5) TRE26283 L/H 6) TR82820 (4) 7) TR88112 8) TRE16495	1) TRE55343 2) TRE31929 3) TRE31973 4) TR54987 5) TR113752	1) TAT24252 2) TT26321 3) TAT18009 4) TT20034 5) TT20073 6) TT20070
						
		Valve, Intake	Valve, Exhaust	Insert, Valve 1) Intake 2) Exhaust	1) Cap, Valve 2) Lock, Valve	1) Spring, Valve 2) Rotator, Valve 3) O'ring, Valve
		TR79623 Std. TR79628 .003 TR79629 .015	TR79624 Std. TR79625 .003 TR79626 .015	1) TR73064 Std. 2) TR51734 Std.	1) TT20129 2) TT20077	1) TR26125 2) TRE11410 3) TR87627
						
		1) Thermostat 2) Thermostat Cover	Fuel Transfer Pump	Water Pump Rep Kit a) Without Impeller b) With Impeller	Water Pump	Injector, Pencil Seal
		1) TRE33705 180° F (3) 2) TT23620	TRE42211	a) TRE19507 b) TRE62658	TAT27018 (m) R48997, (m) R51039	TAR89564 TR60746 TR48000

(1) Some of these engines maybe turbocharged.

(2) For Connecting Rods RE16495 and RE21076 Use Connecting Rod Bolt [TR80033](#).

(3) Do not use with Housing (m) R54096, R70741, R74549.

(4) Threaded Type.

(5) [TR91708](#) (Outer Diam. 2.00 mm / 0.078 in) Larger and [TR57160R](#) (Inner Diam 0.5 mm / 0.020 in) Smaller, are also available.